Custom Dynamics® Fog Light Mounting Clamps Installation Instructions

Part Number

CD-125-B, CD-125-C

Package Contents

Fog Light Mounting Clamps (2)
3mm Allen Head Screws (4)
2.5mm Set Screws (2)
3mm Hex Wrench (1)
2.5mm Hex Wrench (1)
8mm-1.25" x 25mm Button Head Bolts (2)
Small OD Washers (2)
Nord-Lock® Washers (2)
Instructions (1)



Fitment

Universal mount to 1.25" engine guards. 5/16" mounting hole. Hardware supplied for compatibility with Custom Dynamics® Shark Demon® Fog Lights and ProBEAM® Fog Lights **(sold separately).**

Suggested Tools

Safety Glasses

Installation

Warning

Rider and passenger safety depend upon the correct installation of this kit. Use the appropriate service manual procedures. If the procedure is not within your capabilities or you do not have the correct tools, have a qualified technician perform the installation. Improper installation of this kit could result in death or serious injury.

1. Remove all necessary parts to disconnect the negative battery cable from the battery.
2. Install the Custom Dynamics® Fog Light Mounting Clamps on the motorcycles engine guard by fitting both clamp halves around the tube and using the supplied 3mm Allen Head Screws to fasten clamps using supplied 3mm Hex Wrench to tighten and finally use the supplied 2.5mm Set Screw and 2.5mm Hex Wrench to lock them in place.

Notice

Hand start all bolts, **DO NOT** use impact wrench/"zip gun" when installing.


3. Install the Custom Dynamics® Shark Demon® Fog Lights or ProBEAM® Fog Lights **(sold separately)** to the Custom Dynamics® Fog Light Mounting Clamps. Refer to the Custom Dynamics® Fog Light instructions for installation. Custom Dynamics® Fog Light Mounting Clamps with Custom Dynamics® Shark Demon® Fog Lights shown in **Figure 1.**

Note

When installing Shark Demon® Fog Lights use supplied 8mm-1.25" x 25mm Button Head Screws, Small OD Washers and Nord-Lock® Washers **(Nord-Lock® Washers go in-between the Shark Demon® Fog Light and Fog Light Mounting Clamp to prevent rotation).**

Questions? Email: Info@CustomDynamics.com or Call us at: 1(919)554-0949 M-TH 8:30AM-5:30PM, F 9:30AM-5:30PM EST

Installation Instructions Continued - 2

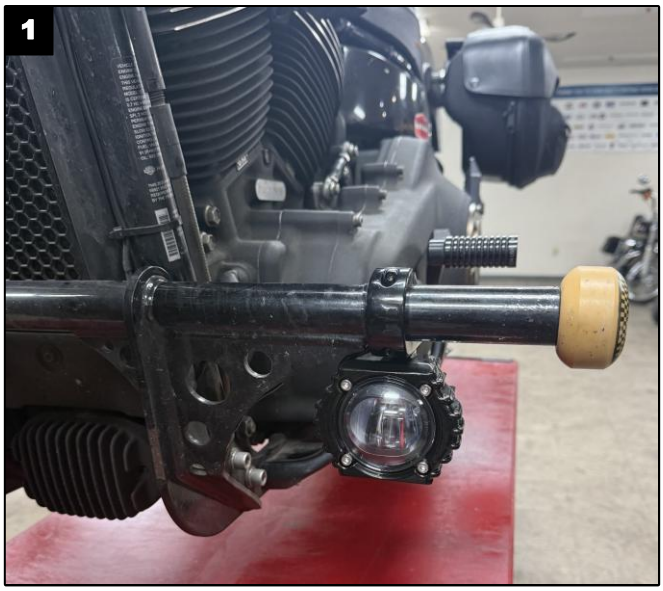

4. Reconnect the negative battery cable to the battery and reinstall all necessary parts.
5. Test the Custom Dynamics® Shark Demon® Fog Lights or ProBEAM® Fog Lights for proper operation.