



Custom Dynamics® SXS License Plate Mount for Honda Talon Installation Instructions

We thank you for purchasing the Custom Dynamics® SXS License Plate Mount for Honda Talon. Our products utilize the latest technology and high quality components to ensure you the most reliable service. We offer one of the best warranty programs in the industry and we back our products with excellent customer support, if you have questions before or during installation of this product please call Custom Dynamics® at 1(800) 382-1388.

Part Numbers: CD-LPB-TALON

Package Contents:

- SXS License Plate Mount (1)
- License Plate Mounting Screws (4)
- Instructions (1)

Fits: All Honda Talon models. Attaches to rear muffler protector (OEM 18312-HL6-A00).



Installation:

1. Disconnect the negative battery cable from the battery.
2. Remove 2 lower OEM screws from the Talon Muffler Protector. Shown in **Figure 1**.



3. Place the top of the License Plate Mount over upper edge of the Talon Muffler Protector. Confirm the clips on the License Plate Mount hook behind the Muffler Protector. Shown in **Figure 2**.



4. Rotate the License Plate Mount down and align the lower mounting holes with the lower holes on the Talon Muffler Protector.



Please read all Information below before Installation

Warning: Disconnect negative battery cable from battery; refer to owner's manual. Failure to do so may result in electrical shock, injury, or fire. Secure negative battery cable away from positive side of battery and all other positive voltage sources on vehicle.

Safety First: Always wear appropriate safety gear including safety glasses when performing any electrical work. It is highly recommended that safety glasses be worn throughout this installation process. Be sure vehicle is on level surface, secure and cool.


Note: Do NOT use thread locker such as Loc-Tite™ with this product. It will weaken the plastic at the screw holes causing cracks and will void the warranty.

Questions? Email: info@CustomDynamics.com or Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST

Installation Instructions - Page 2

Installation Continued:

5. Reinstall the OEM screws in the Talon Muffler Protector removed in Step 1. Shown in **Figure 3**.

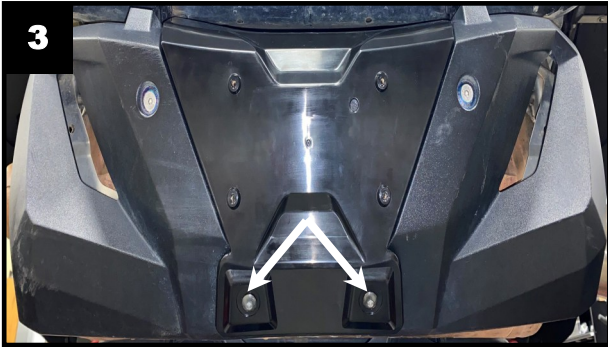

6. Using the supplied License Plate Mounting Screws, install the license plate.

License Plate Mount Holes Diagram:

- A. Illuminated License Plate Frame (Sold Separately) Wire Hole .
- B. 8/32 License Plate Frame Mounting Hole.
- C. Lower Talon Muffler Protector Mounting Hole.

