



Custom Dynamics® SXS LED Plate Frame Kit


Installation Instructions

We thank you for purchasing the Custom Dynamics® SXS LED Plate Frame Kit. Our products utilize the latest technology and high quality components to ensure you the most reliable service. We offer one of the best warranty programs in the industry and we back our products with excellent customer support, if you have questions before or during installation of this product please call Custom Dynamics® at 1(800) 382-1388.

Part Numbers: CD-LPF-RZR3

Package Contents:

- License Plate Frame (1)
- 8-32 x 3/4" Fully Threaded Flat Socket Cap Screw (4)
- 8-32 Nylon Insert Lock Nut (4)
- 6" ties wraps (10)
- Y Harness Adapter (1)
- MX19002S51 (1)
- Instructions (1)

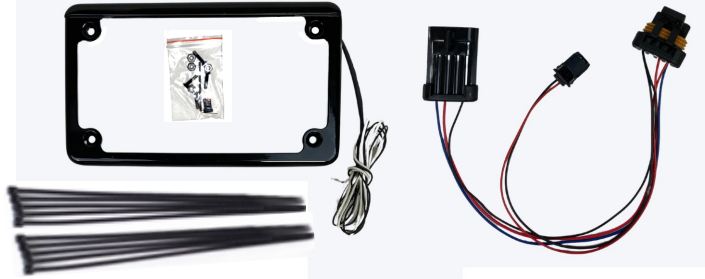

Fitment: 2021-2024 RZR Trail, RZR Trail S, 2021-2022 RZR Trail S 900, 2021 RZR XP Turbo, 2019-2020 RZR-S 1000, 2015-2023 RZR XP 1000, 2018 RZR 900 XC, 2019- 2021 RZR XP Turbo S, 2016-2020 RZR XP Turbo, 2016-2018 RZR-S 1000, 2015-2020 RZR-S 900, RZR 900, 2016-2023 RZR 4 XP, 2017-2021 RZR 4 XP Turbo 1000, 2019 RZR 4 S 1000, RZR 4 XP Turbo S, 2016-2018 RZR 4 XP 900, 2016 RZR 4 XP Turbo, 2015 RZR 4 XP 1000 & RZR 4 XP 900

Installation:

1. Secure vehicle on a level surface. Disconnect negative battery cable from the battery.
2. Locate and unplug the 4-position rear lighting harness connector to the taillights at the rear of the vehicle. Connector is typically located under the left side rear bed rail. Plug the Y Harness Adapter, inline, into the rear lighting harness connectors.
3. Mount License Plate Frame in desired location with the provided hardware. Notch the license plate and or any mounting surface to allow for wires to pass through, and ensure wires are protected from any sharp edges.
4. Route the License Plate Frame wiring towards the Y Harness Adapter. Secure wiring with supplied Cable Ties to keep the wires from being cut, frayed or pinched.
5. Install the provided Male JAE connector onto the License Plate Frame pre-pinned wires by pushing the pins into the connector ports shown in **Figure 1**. Pins should click in place and not pull back out of connector when installed correctly. The black wire goes into Port 1 and the white wire goes into Port 2.
6. Connect the Male JAE connector of the Plate from into the Y Harness Adapter.
7. Reconnect the negative battery cable and reinstall any panels needed to access wiring.
8. Test operation of all lighting before operating the vehicle.



ATTENTION


Please read all Information below before Installation

Warning: Disconnect negative battery cable from battery; refer to owner's manual. Failure to do so may result in electrical shock, injury, or fire. Secure negative battery cable away from positive side of battery and all other positive voltage sources on vehicle.

Safety First: Always wear appropriate safety gear including safety glasses when performing any electrical work. It is highly recommended that safety glasses be worn throughout this installation process. Be sure vehicle is on level surface, secure and cool.

Important: Before beginning installation, disconnect the negative battery cable from the battery to prevent damage to the LEDs or module during installation. Damage to either as a result of direct shorting is not covered under warranty.

Important: For Proper fitment, the license plate may need to be cut or notched to allow the wiring from the frame to pass through. Take care when using power tools. Improper use can cause serious injury.

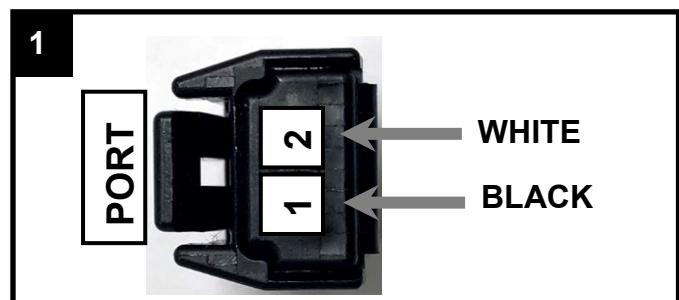

Questions? Email: Info@CustomDynamics.com Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST