



Custom Dynamics® Micro Turn Signals Mounting Bracket Installation Instructions

We thank you for purchasing the Custom Dynamics® Micro Turn Mounting Bracket. Our products utilize the latest technology and high quality components to ensure you the most reliable service. We offer one of the best warranty programs in the industry and we back our products with excellent customer support, if you have questions before or during installation of this product please call Custom Dynamics® at 1(800) 382-1388.

Part Numbers: CD-MICRO-L CD-MICRO-LB

Package Contents:

- Micro Turn Signal L Bracket (2)
- 1/8" Spacer (2)
- Instructions (1)

Fits: Universal, 3/8" Mounting Hole.




ATTENTION

Please read all Information below before Installation

Safety First: Always wear appropriate safety gear including safety glasses when performing any electrical work. It is highly recommended that safety glasses be worn throughout this installation process. Be sure motorcycle is on level surface, secure and cool.

Installation:

1. Select a suitable location to install the Micro Turn Signal Bracket.
2. Mount the Micro Turn Signal to the bracket, Micro Turn Signal will mount in the smaller hole.
3. With the Micro Turn Signal installed, mount the bracket to the motorcycle. Confirm the desired angle of the turn signal is correct before tightening. Use the supplied 1/8" Spacer between the bracket and the mounting surface for clearance as needed. Shown in **Figure 1**.

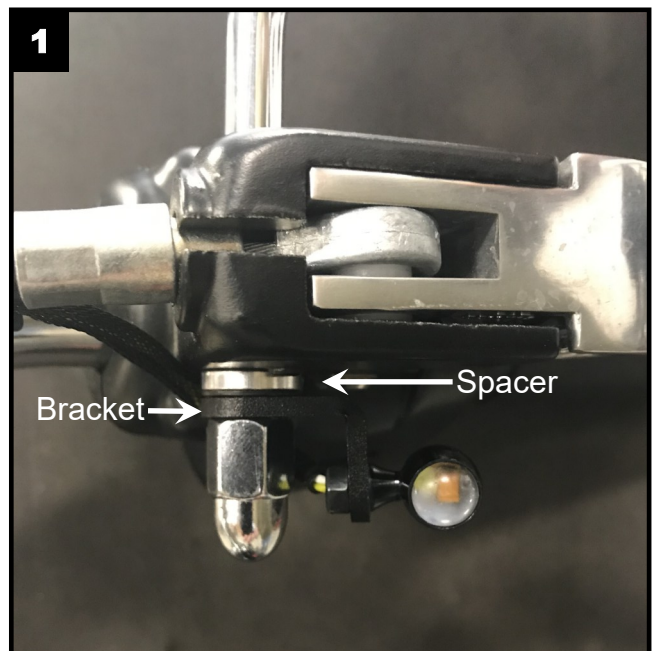

Questions? Email: info@CustomDynamics.com or Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST