



## Custom Dynamics® Mirror Adapter Installation Instructions

We thank you for purchasing the Custom Dynamics® Mirror Adapter. Our products utilize the latest technology and high quality components to ensure you the most reliable service. We offer one of the best warranty programs in the industry and we back our products with excellent customer support, if you have questions before or during installation of this product please call Custom Dynamics® at 1(800) 382-1388.

**Part Numbers:** CD-MIRADPT-1

### Package Contents:


- Mirror Adapters (2)
- M8 x 1.25 nuts (2)
- M8 Lock Washers (2)
- Thread Locker (1)
- Instructions (1)



**Fits:** All Kawasaki, Suzuki, Honda, Victory and 2015-2025 Indian® models.

### Installation:

1. Remove the existing stem from the mirror. Shown in **Figure 1**.

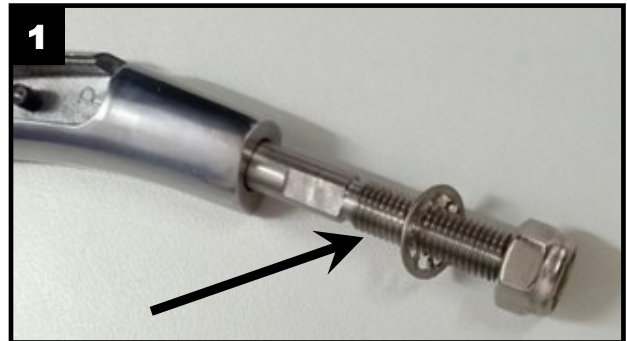

2. Using the supplied Thread Locker, apply thread locker to the 5/6-24 side of the Mirror Adapter and thread the Mirror Adapter into the mirror.
3. Thread the supplied M8 x 1.25 Nut by hand onto the Mirror Adapter until seated against the stop.
4. Install supplied M8 Lock Washer onto the Mirror Adapter.
5. Thread the mirror with the Mirror Adapter, Nut and Locker Washer into the OEM mirror mount until seated.
6. Unthread the mirror until you obtain the desired viewing angle.
7. Hold the mirror and tighten the Mirror Adapter Nut down against the OEM mirror mount. When tightened, you should not be able to move the mirror.
8. Repeat the steps for the other side mirror.



# ATTENTION



Please read all Information below before Installation

**Warning:** Disconnect negative battery cable from battery; refer to owner's manual. Failure to do so may result in electrical shock, injury, or fire. Secure negative battery cable away from positive side of battery and all other positive voltage sources on motorcycle.

**Safety First:** Always wear appropriate safety gear including safety glasses when performing any electrical work. It is highly recommended that safety glasses be worn throughout this installation process. Be sure motorcycle is on level surface, secure and cool.

**Note:** Hand start all bolts, **DO NOT** use impact wrench/"zip gun" when installing.

Questions? Email: [info@CustomDynamics.com](mailto:info@CustomDynamics.com) or Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST