



Custom Dynamics® Radius Plate Frame Mount Installation Instructions

We thank you for purchasing the Custom Dynamics® Radius Plate Frame Mount. Our products utilize the latest technology and high quality components to ensure you the most reliable service. We offer one of the best warranty programs in the industry and we back our products with excellent customer support, if you have questions before or during installation of this product please call Custom Dynamics® at 1(800) 382-1388.

Part Number: CD-PFM-B CD-PFM-C

Package Contents:

- Radius Mounting Plate (1)
- Triangle Gasket (1)
- Fender Mounting Hardware (3)
- Plate Screws/2 Sizes (4 per size)
- Instructions (1)

Fits: 1984-2024 Harley-Davidson® models with the standard 3-bolt mounted license plate bracket (OEM Parts 59984-73 and 59986-75) including 1984-1985 XLS, XLH1000, XR1000, 1984-1986 XLX, 1986-1987 XLH1100, 1996-2010 XL1200C, 2006-2011 XL1200L, 2004-2008 XL1200R, 2007 XL50. 1991-1992 FXDB, 1992 FXDC, 1993-2017 FXDL, 1995-2010 FXD, 1999-2000 FXDS-CONV, 1999-2005 FXDX, 2001-2004 FXDP, 2007-2008 FXDSE, 2006-2008 FXDB, 2005-2014 FXDC. 1988-2021 FLSTC, 2006 FLST, 1993-1996 FLSTN, 1990-2017 FLSTF, 2005-2006 FLSTFSE, 2010-2016 FLSTFB, 2018-2024 FLHCS, 2018-2020 FXLR, 2020-2024 FXLRS, 2022-2024 FXLRST, 2022 FXRST. 2009-2013 FLHRC.


Replaces OEM parts 59984-73 and 59986-75. Compatible with Custom Dynamics® Radius Plate Frames (sold separately).



Please read all Information below before Installation

Important: It is recommended to use the plate screws that come with this product. The screws provided with our plate frames may be too long to use in this application.

Important: For safety, make sure bike is parked on a level surface and is cool before beginning installation.

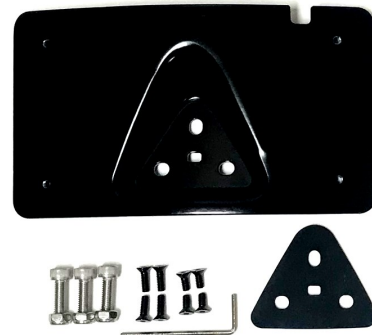

Installation:

1. Remove the OEM license plate mount from the rear fender by removing the 3 screws. The parts removed will not be re-used.
2. When using in conjunction with Custom Dynamics® Radius plate frame, a hole may need to be drilled to pass the LED wiring through the fender. Align the Triangle gasket with the holes in the fender. Mark the center hole with a marker, then drill fender to accept the frame wiring. Take care not drill too far and hit the tire.
3. Install the triangle gasket on the fender.
4. Next, align the plate mount with the triangle gasket making sure holes align.
5. Install the 3 bolts through the holes and attach the nuts to the bolts inside the fender.
6. Tighten the bolts and nuts using a 5 MM hex wrench and a 10 MM nut driver or similar tool.
7. Once mount is on the motorcycle, refer to the instructions that come with the plate frame regarding wiring.
8. When attaching the Plate frame to the plate mount, use the provided mounting screws with this kit. 2 sizes are provided for convenience. Decide which size works best for the plate frame you have.

Questions? Email: info@CustomDynamics.com or Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST