



## Custom Dynamics® Road Glide Mesh Vent Inserts Installation Instructions

We thank you for purchasing the Custom Dynamics® Road Glide Mesh Vent Inserts. Our products utilize the latest technology and high quality components to ensure you the most reliable service. We offer one of the best warranty programs in the industry and we back our products with excellent customer support, if you have questions before or during installation of this product please call Custom Dynamics® at 1(800) 382-1388.

**Part Numbers:** CD-RG23-VENT-B

### **Package Contents:**

- Mesh Vent Inserts (2)



**Fits:** 2023-2025 Harley Davidson® CVO Road Glide (FLTRXSE), 2024-2025 Road Glide (FLTRX) and CVO Road Glide ST (FLTRXSTSE).

### **Installation:**

1. Remove all necessary parts to disconnect the negative battery cable from the battery.
2. Remove 4 screws and rubber seals to remove the windshield. Shown in **Figure 1**.



3. Remove the 3 screws and remove the windshield blocks on both sides of the motorcycle. Shown in **Figure 2**.



Please read all Information below before Installation

**Warning:** Disconnect negative battery cable from battery; refer to owner's manual. Failure to do so may result in electrical shock, injury, or fire. Secure negative battery cable away from positive side of battery and all other positive voltage sources on motorcycle.

**Safety First:** Always wear appropriate safety gear including safety glasses when performing any electrical work. It is highly recommended that safety glasses be worn throughout this installation process. Be sure motorcycle is on level surface, secure and cool.

Questions? Email: [info@CustomDynamics.com](mailto:info@CustomDynamics.com) or Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST


## Installation Instructions - Page 2

### Installation Continued:



4. Remove center vent face cover that is held in place by retaining clips by gently prying and pulling vent cover straight out and away from motorcycle. Shown in **Figure 3**.




5. Remove vent cover by lifting up and out and do not lose the rubber windshield posts. Shown in **Figures 4 & 5**.

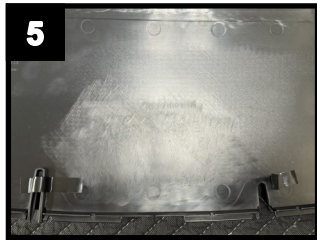


6. Remove outer fairing by removing the speaker grills that are held into place with retaining clips, pry up at the inner edge and pull away from motorcycle. Remove the 2 screws in speakers area and the 2 screws down at the fairing wind deflectors and remove the final 4 screws at the top of the fairing and remove fairing gently. Shown in **Figures 6, 7 & 8**.

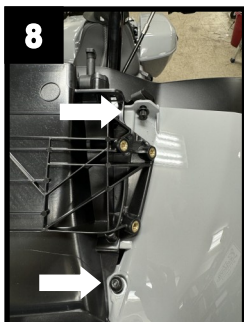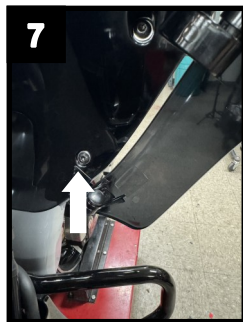


7. When removing outer fairing gently pull away from the motorcycle and set aside in a safe place to prevent damage.
8. Remove headlight by removing 6 screws and pull headlight away from motorcycle and unplug the headlight connector. Shown in **Figures 9 & 10**.

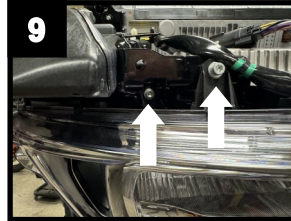

9. Remove the OEM foam from the vent hole in the headlight. Shown in **Figure 11**.

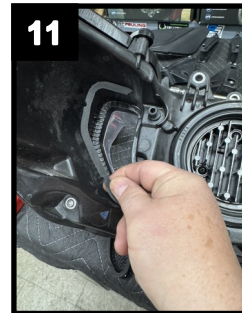

10. Install the Road Glide Mesh Inserts into the vent holes in the headlight. Shown in **Figures 12 & 13**.

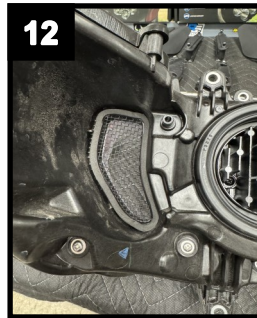

11. Reinstall the fairing and windshield in reverse order of removal.
12. Reconnect the negative battery cable to the battery and reinstall all necessary parts.
13. Test the headlight for proper operation.