

Custom Dynamics® Seat Bolt Mounted Brake Light Installation Instructions



Part Numbers

Patent

CD-SBTL-UNV-S, CD-SBTL-UNV-R

Patent Pending

Package Contents

Custom Dynamics® Seat Bolt Mounted Brake Light (1)
1/4"-20 x 1.00" 12 point Bolt (1)
Adapter Harness (1)
6" Cable Ties (6)
Instructions (1)



Fitment

Universal; 12VDC systems with negative ground plus run and brake functions.

Suggested Tools


Safety Glasses
Phillips Screwdriver
5/16" 12-Point Socket

Installation

Warning

Rider and passenger safety depend upon the correct installation of this kit. Use the appropriate service manual procedures. If the procedure is not within your capabilities or you do not have the correct tools, have a qualified technician perform the installation. Improper installation of this kit could result in death or serious injury.

1. Remove all necessary parts to disconnect the negative battery cable from the battery.
2. Remove seat.
3. Connect wires from the Adapter Harness to the Motorcycle as shown in **Figure 1**.
4. Connect Adapter Harness to the Seat Bolt Mounted Brake Light harness.
5. Reinstall the seat using the supplied 1/4"-20 x 1.00" 12 point Bolt through the Seat Bolt Mounted Brake Light.
6. Reinstall all necessary parts to connect the negative battery cable to the battery.
7. Test the new Custom Dynamics® Seat Bolt Mounted Brake Light for proper operation for run and brake.

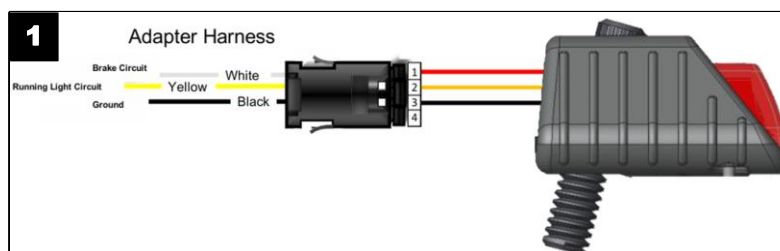

Questions? Email: Info@CustomDynamics.com or Call us at: 1(919)554-0949 M-TH 8:30AM-5:30PM, F 9:30AM-5:30PM EST