



Custom Dynamics® Quick Disconnect Tour-Pak® Wiring Harness Installation Instructions

We thank you for purchasing the Custom Dynamics® Quick Disconnect Tour-Pak® Wiring Harness. Our products utilize the latest technology and high quality components to ensure you the most reliable service. We offer one of the best warranty programs in the industry and we back our products with excellent customer support, if you have questions before or during installation of this product please call Custom Dynamics® at 1 (800) 382-1388.

Part Number: CD-TP-QD-23-I

Package Contents:

- Quick Disconnect Tour-Pak® Wiring Harness (1)
- 6" Cable Ties (6)
- Instructions (1)

Fitment: 2023-2025 Harley-Davidson® CVO™ Street Glide (FLHXSE), CVO™ Road Glide (FLTRXSE), 2025 Street Glide Ultra (FLHXU), 2024-2025 Street Glide (FLHX), Road Glide (FLTRX), and CVO™ Road Glide ST (FLTRXSTSE) with add-on Harley-Davidson® King or Chopped Tour-Pak®.




Please read all Information below before Installation

Warning: Disconnect negative battery cable from battery; refer to owner's manual. Failure to do so may result in electrical shock, injury, or fire. Secure negative battery cable away from positive side of battery and all other positive voltage sources on motorcycle.

Note: Motorcycles that have alarms with sirens. Turn ignition switch on with key fob in close proximity to the motorcycle. Once the motorcycle is disarmed and the ignition switch is still in the ON position, pull the Maxi-Fuse. This will prevent the siren from setting with the battery removed.

Important: Motorcycle should be secured on a level surface for installation.

Important: This product is designed to be used specifically with the 2014-Current Harley-Davidson® OEM Tour-Pak® or Custom Dynamics® Tour-Pak® Power Harness (CD-HARN-TP-1) and Custom Dynamics® Tour-Pak® lighting (**both sold separately**).

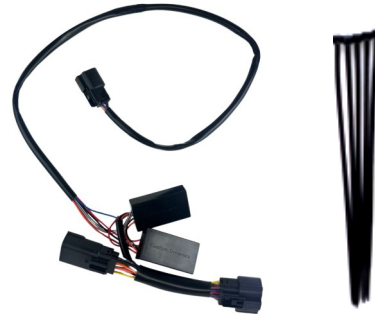

Installation:

1. Remove the seat and disconnect the negative battery cable from the battery.
2. Unplug the rear lighting harness connector to the rear fender from the main wiring harness.
3. Plug the Quick Disconnect Tour-Pak® Wiring Harness, in-line, into the rear lighting harness and into the motorcycles main wiring harness.
4. Reconnect the negative battery cable to the battery.
5. Route the Quick Disconnect Tour-Pak® Wiring Harness towards the seat bolt on the rear fender. Use the supplied 6" Cable Ties to secure wiring from being cut, frayed or pinched.
6. Reinstall the seat and ensure the Quick Disconnect Tour-Pak® Wiring Harness will not be pinched or damaged under the seat when installed.
7. Install your Tour-Pak® and connect the Tour-Pak® wiring harness to the Quick Disconnect Tour-Pak® Wiring Harness.
8. Test all Tour-Pak® lighting for proper operation.

Note: Outer turn signals on the Tour-Pak® will work as run and turn and will not carry brake function.