



Custom Dynamics® Universal Steering Column Switch Installation Instructions


We thank you for purchasing the Custom Dynamics® Universal Steering Column Switch. Our products utilize the latest technology and high quality components to ensure you the most reliable service. We offer one of the best warranty programs in the industry and we back our products with excellent customer support, if you have questions before or during installation of this product please call Custom Dynamics® at 1(800) 382-1388.

Part Numbers: CD-UTV-SWITCH

Package Contents:

- Universal Steering Column Switch (1)
- Mounting Clamp (1)
- Instructions (1)

Fits: Universal 12VDC negative ground systems, SXS & UTV.

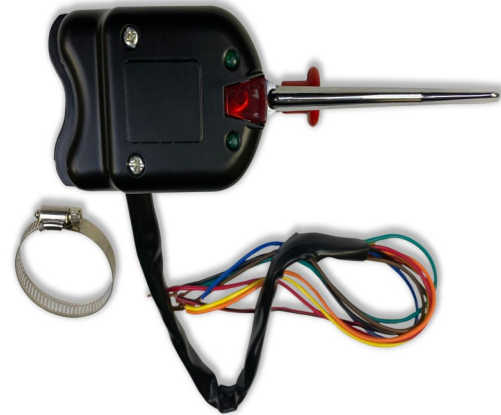

ATTENTION

Please read all Information below before Installation

Warning: Disconnect negative battery cable from battery; refer to owner's manual. Failure to do so may result in electrical shock, injury, or fire. Secure negative battery cable away from positive side of battery and all other positive voltage sources on vehicle.

Safety First: Always wear appropriate safety gear including safety glasses when performing any electrical work. It is highly recommended that safety glasses be worn throughout this installation process. Be sure vehicle is on level surface, secure and cool.

Important: This product is designed and intended for use as auxiliary lighting only. It is NOT intended to replace any original equipment lighting installed on the vehicle and should not be used for that purpose. This product must be wired so that it does not interfere with any original equipment lighting.

Installation:

1. Disconnect the negative battery cable from the battery.
2. Using the supplied Mounting Clamp, mount the Steering Column Switch to the steering column. Allow clearance to fully operate the turn signal lever and hazard button on the Steering Column Switch.
3. Connect the vehicle lighting to the Steering Column Switch as shown in the **Wiring Diagram on Page 2**.
4. Secure the wiring with cable ties to prevent the wires from being cut, frayed or pinched.
5. Reconnect the negative battery cable to the battery.
6. Test the Custom Dynamics® Universal Steering Column Switch for proper operation.

Wiring Diagram:

