



## Custom Dynamics® Magic Strobes™ Brake Flasher Installation Instructions

We thank you for purchasing the Custom Dynamics® Magic Strobes™ Brake Light Flasher! Our products utilize the latest technology and high quality components to ensure you the most reliable service. We offer one of the best warranty programs in the industry and we back our products with excellent customer support, if you have questions before or during installation of this product please call Custom Dynamics® at 1(800) 382-1388.

**Part Number: MAGIC-STROBES-STTL**

**Package Contents:**

- Magic Strobes™ Brake Flasher (1)
- Tie Wraps (5)

Fits: 2018-2024 Harley-Davidson® Softail Heritage Classic (FLHC/FLHCS), 2020-2024 Low Rider S (FXLRS), 2022-2024 Low Rider ST (FXLRST) & 2022 Low Rider El Diablo (FXRST), 2018-2020 Low Rider (FXLR), Deluxe (FLDE) and 2019-2020 FXDR.



Please read all Information below before Installation

**Important:** Module must be secured after installation. Find safe area away from any moving parts and out of the way of normal operation of the bike. Use the enclosed tie-wraps to secure. Custom Dynamics® is not liable for damage as a result of improperly securing or failing to secure the module.


**Important:** Customers using this module with standard incandescent bulbs should use patterns 0-3 and only. Any other settings selected will result in diminished performance.

**Caution:** A stuck brake switch may cause this unit to over-heat and fail. Unplug module immediately if this condition occurs.

**Note:** Although this device has been designed to significantly increase your braking visibility, flash/strobe patterns may not be street legal in your area. This Device is not DOT approved.

**Installation:**

1. Secure motorcycle on level surface.
2. Remove seat or side panel.
3. Disconnect negative [ - ] battery cable from the battery.
4. Locate and unplug the brake light connector to the rear fender.
5. Plug the Magic Strobes™ module, in-line, into the rear brake light harness. (picture 1)
6. Re-connect the battery's negative battery cable to the negative [ - ] of the battery.
7. Select desired pattern on the dial with power Off. (See page 2 for pattern information)
8. Check operation.
9. To change pattern, turn bike OFF and change dial to desired pattern.
10. Locate a secure place for the Magic Strobes™ unit that will not interfere with the secure placement of the seat. Secure with the enclosed tie-wraps so that unit will not move.

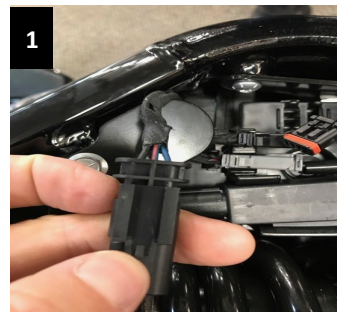

Questions? Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST

## Flash Pattern Information:

