



Custom Dynamics® Genesis® 4 LED Front Turn Signals Installation Instructions

We thank you for purchasing the Custom Dynamics® Genesis® 4 LED Front Turn Signals. Our products utilize the latest technology and high quality components to ensure you the most reliable service. We offer one of the best warranty programs in the industry and we back our products with excellent customer support, if you have questions before or during installation of this product please call Custom Dynamics® at 1(800) 382-1388.

Part Numbers: GEN-4-AW-25ST

Package Contents:

- Genesis® 4 Amber/White LED Clusters (2)
- Instructions (1)



Fits: 2025 Harley-Davidson® Softail Low Rider S (FXLRS), Low Rider ST (FXLRST), Street Bob (FXBB), Fat Boy (FLFB), Breakout (FXBR) and Heritage Classic (FLHC).

Note: Custom Dynamics® smoked or clear motorcycle turn signal lens (sold separately) required for proper installation. OEM lenses are not compatible.


Note: CD-25HT-FTS-HARN (sold separately) is required for use with 2025 Softail Heritage Classic (FLHC).

Installation:

1. Remove all necessary parts to disconnect the negative battery cable from the battery.
2. Remove the OEM lens by using a flat blade screwdriver in the lens slot and gently twist.
3. Remove the OEM turn signal insert by pressing the tabs on the JAE connector to unplug the turn signal insert. Shown in Figure 1.



4. Install new Genesis® 4 LED Cluster by plugging in the JAE connectors. Shown in Figure 2.

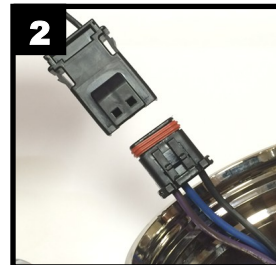

5. Push connector, wiring and Genesis® 4 LED Cluster into housing and install new Custom Dynamics® Lens and gasket (sold separately), snapping into place.
6. Reconnect the negative battery cable to the battery and reinstall all necessary parts.
7. Test the new Custom Dynamics® Genesis® 4 LED Turn Signals for proper operation.



ATTENTION

Please read all Information below before Installation

Warning: Disconnect negative battery cable from battery; refer to owner's manual. Failure to do so may result in electrical shock, injury, or fire. Secure negative battery cable away from positive side of battery and all other positive voltage sources on motorcycle.

Safety First: Always wear appropriate safety gear including safety glasses when performing any electrical work. It is highly recommended that safety glasses be worn throughout this installation process. Be sure motorcycle is on level surface, secure and cool.

Note: DOT compliant when used behind Custom Dynamics® smoked or clear motorcycle turn signal lens (sold separately).

Important: Perform a BCM Sync by turning the ignition **ON**. Turn 4 way hazards on and count 10 flashes and deactivate. Turn 4 way hazards on for another 10 flashes and deactivate. Turn **OFF** then back **ON**, turn 4 way hazards on for another 10 flashes and deactivate. After performing the BCM Sync, turn ignition **ON** and check dash turn signal indicators operation and make sure they are not Rapid Flashing.

Questions? Email: info@CustomDynamics.com or Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST