

Custom Dynamics® ProBEAM® Bullet Lens Installation Instructions



We thank you for purchasing the Custom Dynamics® ProBEAM® Bullet Lens. Our products utilize the latest technology and high quality components to ensure you the most reliable service. We offer one of the best warranty programs in the industry and we back our products with excellent customer support. If you have questions before or during installation of this product please call Custom Dynamics® at 1(800) 382-1388.

Part Number: PRO-B-LENS-SMK PRO-B-LENS-AMBER
PRO-B-LENS-RED PRO-B-LENS-CLEAR
PB-B-LENS-SMOKE HDBULLETA
HDBULLETR HDBULLETC

Package Contents:

- ProBEAM® Lenses (1 pair) or (1 each)
- Instructions (1)

Fitment: 2000-2025 Harley-Davidson® motorcycles with OEM Bullet Style H-D™ turn signal housings. Can only replace the front lenses on V-Rod® models and 2008-2012 XR1200.



Please read all Information below before Installation

Note: Use care in removing the OEM lens and bulbs from the housing, so as not to scratch or mar the chrome housing. Custom Dynamics® is not liable for the damage to chrome housing during installation.

Note: When inserting the base use proper sized 5/16" flat blade screwdriver. Using too small of a screwdriver will damage the base and void the warranty.


Caution: If there is a gap between the lens and the housing, water will leak into the unit and cause damage, be sure the lens is fully seated all the way around the perimeter. If the lens will not fully seat on the housing, it may be necessary to trim excess gasket with a small flat blade screwdriver.

Caution: Do not use the lens if any of the tabs are broken, doing so may cause water to enter the housing. Do not install the lens without the ProBEAM® lens gasket in place, doing so will cause water to leak into the housing.



Installation:

1. Remove OEM lens from front turn signal housing using a flat blade screwdriver.
2. Locate notch in lens insert flat blade screwdriver and twist to release the tab. Shown in **Figure 1**.

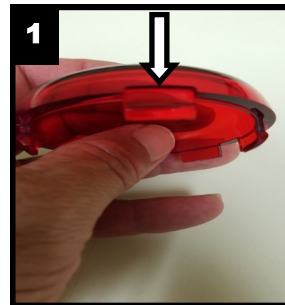

3. Remove any dirt or debris from inside of turn signal housing.
4. Use a small screwdriver, go around the perimeter of the reflector and slightly push the black gasket into the housing to allow the clearance for the new ProBEAM® Lens. Shown in **Figure 2**.



5. Install new ProBEAM® Lens with gasket onto the turn signal housing.

Questions? Email: info@CustomDynamics.com or Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST