




Custom Dynamics® Indian® Headlight Adapter Harness Installation Instructions

We thank you for purchasing the Custom Dynamics® Indian® Headlight Adapter Harness. Our products utilize the latest technology and high quality components to ensure you the most reliable service. We offer one of the best warranty programs in the industry and we back our products with excellent customer support, if you have questions before or during installation of this product please call Custom Dynamics® at 1(800) 382-1388.

Part Numbers: IND-HL-ADPT

Package Contents:

- Indian® Headlight Adapter Harness (1)
- Instructions (1)

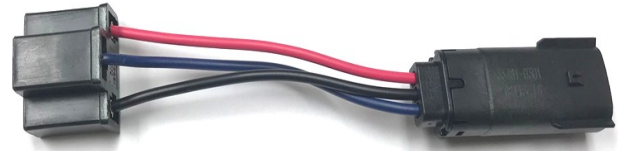

Fits: 2020-2025 Indian Roadmaster, Roadmaster Dark Horse, Roadmaster Limited, 2020-2024 Challenger, Challenger Dark Horse, Challenger Limited & Challenger Elite, 2022-2024 Pursuit Limited & Pursuit Dark Horse, 2020-2025 Chieftain Limited & Chieftain Dark Horse, 2020-2023 Chieftain Elite, 2020 & 2024-2025 Roadmaster Elite, 2023-2025 Chieftain, Springfield & Springfield Dark Horse models equipped with OEM 7" LED Headlight.

Installation:

1. Disconnect the negative battery cable from the battery.
2. Disconnect and remove the OEM headlight from the motorcycle harness.
3. Connect the Indian® Headlight Adapter Harness to the motorcycle harness.
4. Connect the H4 connector on the Indian® Headlight Adapter Harness to the Custom Dynamics® LED Headlight H4 connector.
5. Reinstall the headlight.
6. Test the Custom Dynamics® LED Headlight for proper operation.



Please read all Information below before Installation

Warning: Disconnect negative battery cable from battery; refer to owner's manual. Failure to do so may result in electrical shock, injury, or fire. Secure negative battery cable away from positive side of battery and all other positive voltage sources on motorcycle.

Safety First: Always wear appropriate safety gear including safety glasses when performing any electrical work. It is highly recommended that safety glasses be worn throughout this installation process. Be sure motorcycle is on level surface, secure and cool.

Note: Hand start all bolts, **DO NOT** use impact wrench/"zip gun" when installing.

Questions? Email: info@CustomDynamics.com or Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST