



## Custom Dynamics® Magic Strobes™ Installation Instructions

We thank you for purchasing the Custom Dynamics® Magic Strobes™ Module. Our products utilize the latest technology and high quality components to ensure you the most reliable service. We offer one of the best warranty programs in the industry and we back our products with excellent customer support, if you have questions before or during installation of this product please call Custom Dynamics® at 1(800) 382-1388.

**Part Number:** MAGIC-STROBES-23

### Package Contents:

- Magic Strobes™ Plug and Play Module (1)
- Instructions (1)

**Fits:** 2023-2025 Harley-Davidson® CVO Street Glide (FLHXSE), CVO Road Glide (FLTRXSE), 2025 Street Glide Ultra (FLHXU), 2024-2025 Street Glide (FLHX), Road Glide (FLTRX), and CVO Road Glide ST (FLTRXSTSE).



## ATTENTION

Please read all Information below before Installation

**Caution:** Must be used with Low Power Current Draw LEDs such as Custom Dynamics®. The use of Incandescent or High Power LEDs (greater than 84 watt or 6 amps) will cause the unit to fail.

**Caution:** A stuck brake switch may cause this unit to overheat and fail. Unplug module immediately if this condition occurs.


**Important:** Module must be secured after installation. Find safe area away from any moving parts and out of the way of normal operation of the motorcycle. Use cable ties or other means to secure. Custom Dynamics® is not liable for damage as a result of improperly securing or failing to secure the module.

**Important:** This module will not work properly if the settings in your BCM (body control module) have been modified from its stock OEM configuration.

**Note:** Although this device has been designed to significantly increase your braking visibility, flash/strobe patterns may not be street legal in your area. This device is not DOT approved.

### Installation:

1. Remove seat and disconnect negative battery cable from the battery.
2. Locate and unplug the lighting connector to the rear fender. Shown in **Figure 1**.
3. Plug the Magic Strobes™ module, in-line, into the rear lighting harness and into the bike's wiring harness.
4. Reconnect the negative battery cable to the battery.
5. Locate a secure place for the Magic Strobes™ module that will not interfere with the secure placement of the seat or side cover. Use cable ties or tape if needed.
6. Select the desired strobe setting shown on **Page 2** with the power off. Always turn power off before changing settings.
7. Turn power on and test for function of the turn signals, running and brake signals with desired setting. Confirm that the turn signal will override the brake signal when the brakes are applied and reinstall the seat.

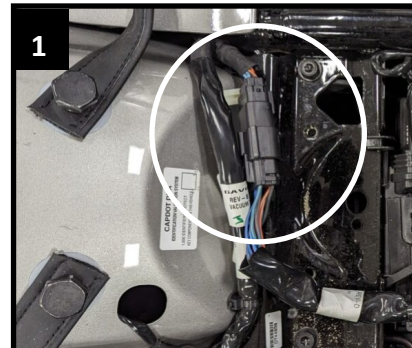

# Installation Instructions - Page 2

## Flash Pattern Information:

