



Custom Dynamics® Magic Strobes™ Brake Flasher Installation Instructions

We thank you for purchasing the Custom Dynamics® Magic Strobes™ Brake Flasher. Our products utilize the latest technology and high quality components to ensure you the most reliable service. We offer one of the best warranty programs in the industry and we back our products with excellent customer support, if you have questions before or during installation of this product please call Custom Dynamics® at 1(800) 382-1388.

Part Numbers: MAGIC-STROBES-ISN
MAGIC-STROBES-ISP

Package Contents:

- Magic Strobes™ Brake Flasher Module (1)
- Cable Ties (5)
- Instructions (1)



Fits: MAGIC-STROBES-ISN: NORTH AMERICA (US, CANADA & MEXICO) MODEL 2019-2025 Indian® Chieftain, Chieftain Limited, Chieftain Dark Horse, & Roadmaster Dark Horse, 2019-2023 Chieftain Elite, 2021-2025 Roadmaster Limited, 2024 Roadmaster Elite, 2021 Indian Vintage Dark Horse, 2020 Indian Chief Dark Horse and 2020-2025 Springfield Dark Horse. **Does not fit International Models.**

MAGIC-STROBES-ISP: NORTH AMERICA (US, CANADA & MEXICO) MODEL 2020-2025 Indian® Challenger, Challenger Dark Horse, Challenger Limited, 2020-2024 Challenger Elite, 2022-2025 Pursuit Limited & Pursuit Dark Horse, 2022-2024 Chief, Chief Dark Horse, Chief Bobber, Chief Bobber Dark Horse, Super Chief & Super Chief Limited, 2023-2024 Sport Chief, 2025 Chieftain PowerPlus 108, Chieftain PowerPlus Limited 108, Chieftain PowerPlus Dark Horse 108, Roadmaster PowerPlus Dark Horse 108, and Roadmaster PowerPlus Limited 108. **Does not fit 2025 PowerPlus 112 models.**



ATTENTION

Please read all Information below before Installation

Warning: Disconnect negative battery cable from battery; refer to owner's manual. Failure to do so may result in electrical shock, injury, or fire. Secure negative battery cable away from positive side of battery and all other positive voltage sources on motorcycle.

Safety First: Always wear appropriate safety gear including safety glasses when performing any electrical work. It is highly recommended that safety glasses be worn throughout this installation process. Be sure motorcycle is on level surface, secure and cool.


Important: This product is designed and intended for use as auxiliary lighting only. It is NOT intended to replace any original equipment lighting installed on the motorcycle and should not be used for that purpose. This product must be wired so that it does not interfere with any original equipment lighting.

Installation:

1. Remove all necessary parts to disconnect the negative battery cable from the battery.
2. On Chief models, remove the 4 rear fender panel mounting bolts and remove the rear fender panel. Shown in **Figure 1**.




3. Locate and unplug the rear lighting connector to the rear fender under the seat. Shown in **Figure 2**. For all models except Chief models, the rear lighting connector is located on the right side near the rear fender. Shown in **Figure 3**.

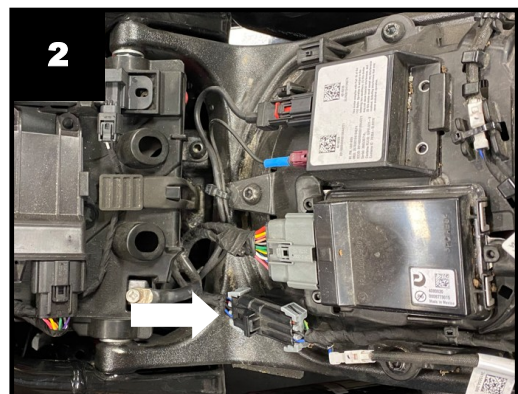

Questions? Email: info@CustomDynamics.com or Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST

Installation Instructions - Page 2

Installation Continued:

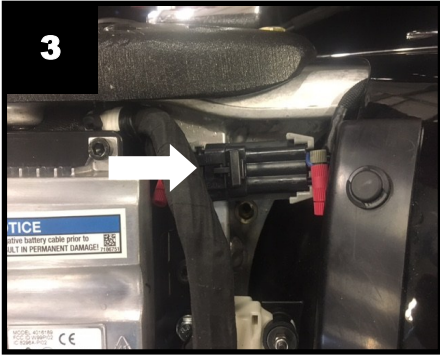

4. Plug the Magic Strokes™ Module inline into the rear lighting harness and the motorcycles main wiring harness.
5. Reconnect the negative battery cable to the battery.
6. Select the desired pattern on the dial with the power OFF. Shown below in the Flash Pattern Information.
7. Secure the Magic Strokes™ Module with the supplied Cable Ties so the unit can not move and all wires from being cut, frayed or pinched.

8. Reinstall all necessary parts.
9. Test the Custom Dynamics® Magic Strokes™ Brake Flasher for proper operation.



Flash Pattern Information:

