

Custom Dynamics® Mounting Block for 5.75" Softtail Headlight Bucket Installation Instructions



Part Numbers

MOUNT-V2-18ST

Package Contents

Custom Dynamics® Headlight Mounting Block (1)
Instructions (1)



Fitment

2018-2026 Harley-Davidson® Softail Street Bob (FXBB/FXBBS), 2018-2020 Low Rider (FLXR) and 2020-2024 Softail Standard (FXST).

Note

Compatible with Custom Dynamics® 5.75" Softtail Headlight Bucket: CD-18ST-BUCKET (**sold separately**).

Suggested Tools

Safety Glasses
1/4" Allen Socket
9/16" Open End Wrench

Installation

Warning

Rider and passenger safety depend upon the correct installation of this kit. Use the appropriate service manual procedures. If the procedure is not within your capabilities or you do not have the correct tools, have a qualified technician perform the installation. Improper installation of this kit could result in death or serious injury.


1. Remove all necessary parts to disconnect the negative battery cable from the battery.
2. Remove OEM Headlight assembly, headlight mount and unplug headlight connector. Save OEM mounting bolt for reuse.
3. Mount the new Custom Dynamics® Headlight Mounting Block using the OEM mounting bolt. The Headlight Mounting Block should be installed with the flat side facing the front of the motorcycle to maintain the OEM headlight position. Shown in **Figure 1**.

Note

The Custom Dynamics® Headlight Mounting Block can be installed in the opposite direction to extend the headlight forward 1-3/8" if needed.

4. Install the new Custom Dynamics® Headlight Bucket and LED Headlight (**sold separately**) to the Custom Dynamics® Headlight Mounting Block. Refer to the Headlight Bucket and Headlight Bucket instructions for installation.

Questions? Email: Info@CustomDynamics.com or Call us at: 1(919)554-0949 M-TH 8:30AM-5:30PM, F 9:30AM-5:30PM EST

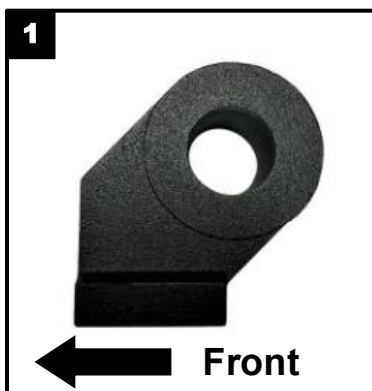

5. Reconnect the negative battery cable to the battery and reinstall all necessary parts.
6. Test the new Custom Dynamics® or ProBEAM® LED Headlight for proper operation.

