



Custom Dynamics® Plug and Play Mirror Adaptor Harness Installation Instructions

We thank you for purchasing the Custom Dynamics® Plug and Play Mirror Adaptor Harness. Our products utilize the latest technology and high quality components to ensure you the most reliable service. We offer one of the best warranty programs in the industry and we back our products with excellent customer support, if you have questions before or during installation of this product please call Custom Dynamics® at 1(800) 382-1388.

Part Numbers: MPR-ST-FTS

Package Contents:

- Mirror Adaptor Harness (1)
- Instructions (1)

Fits: 1996-2005 Harley-Davidson® Electra Glide Standard (FLHT), Electra Glide Classic (FLHTC), Ultra Classic (FLHTCU), CVO™ Electra Glide (FLHTCSE), and 1993-2017 Softail models.



ATTENTION

Please read all Information below before Installation

Warning: Disconnect negative battery cable from battery; refer to owner's manual. Failure to do so may result in electrical shock, injury, or fire. Secure negative battery cable away from positive side of battery and all other positive voltage sources on vehicle.

Safety First: Always wear appropriate safety gear including safety glasses when performing any electrical work. It is highly recommended that safety glasses be worn throughout this installation process. Be sure vehicle is on level surface, secure and cool.


Important: This product is designed and intended for use as auxiliary lighting only. It is NOT intended to replace any original equipment lighting installed on the vehicle and should not be used for that purpose. This product must be wired so that it does not interfere with any original equipment lighting.



Installation:

Note: This is a supplemental installation instruction guide for the install of a wire adaptor to install LED Mirrors. Refer to LED Mirror instructions before starting.

1. Locate the OEM front turn signal connectors shown in **Figure 1 (96-05 FLH)**, **Figure 2 (93-17 FLS)**.
2. Disconnect OEM front turn signal connector and plug in the Mirror Adaptor Harness into the turn signal connector.
3. Connect JAE connectors from the LED Mirrors to the JAE connectors from the Mirror Adaptor Harness. Left/Violet, Right/Brown.
4. Refer back to LED Mirror installation instructions to continue install of LED Mirrors.

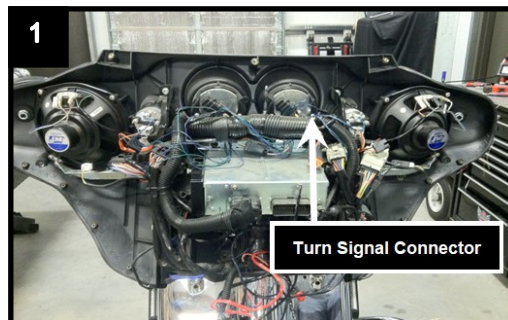

Questions? Email: Info@CustomDynamics.com or Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST