

Custom Dynamics® ProBEAM® Adaptive LED Headlight Installation Instructions



We thank you for purchasing Custom Dynamics® ProBEAM® Adaptive LED Headlight. Our LEDs offer maintenance free service and higher visibility. We offer one of the best warranty programs in the industry and we back our products with excellent customer support, if you have questions before or during installation of this product please call Custom Dynamics® at 1(800)382-1388. Patent Pending.

Part Number: PB-7A-IND-B PB-7A-IND-C

Package Contents:

- ProBEAM® Adaptive LED Headlight (1)
- Retaining Ring O-Ring (1)
- Retaining Ring Nylon Spacer (1)
- Mounting Screws (4)
- Instructions (1)


Fitment: 2015-2025 Indian Chieftain, Chieftain Dark Horse, Chieftain Limited, Roadmaster, Roadmaster Dark Horse & Roadmaster Limited, 2015-2023 Chieftain Elite, 2016-2025 Springfield & Springfield Dark Horse, 2015-2021 Chieftain Classic & Roadmaster Classic, 2015-2021 & 2024-2025 Roadmaster Elite, 2020-2024 Challenger, Challenger Dark Horse, Challenger Limited & Challenger Elite, 2022-2024 Pursuit Limited & Pursuit Dark Horse, 2015-2020 Chief, Chief Classic, Chief Dark Horse, Chief Vintage, 2021 Vintage & Vintage Dark Horse.

Note: IND-HL-ADPT Headlight Adapter (sold separately) required with MX150 headlight connector.



Installation:

1. Remove all necessary parts to disconnect the negative battery cable from the battery.
2. Remove the OEM headlight from the motorcycle.
3. Check the OEM headlight connector to see if your motorcycle has an H4 or MX150 connector. Shown in **Figure 1**. **Note: If motorcycle has MX150 connector you will need IND-HL-ADPT Headlight Adapter (sold separately).**

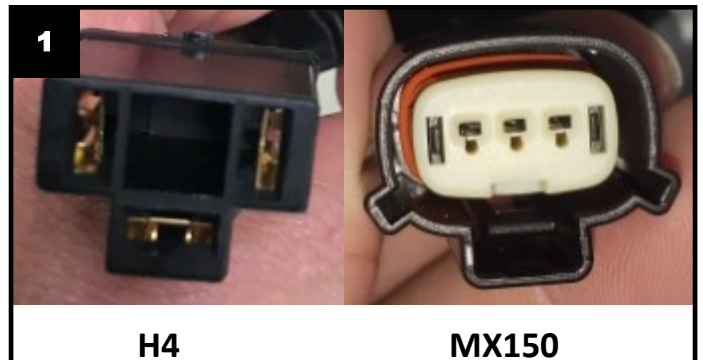

ATTENTION

Please read all Information below before Installation

Warning: Disconnect negative battery cable from battery; refer to owner's manual. Failure to do so may result in electrical shock, injury, or fire. Secure negative battery cable away from positive side of battery and all other positive voltage sources on motorcycle.

Safety First: Always wear appropriate safety gear including safety glasses when performing any electrical work. It is highly recommended that safety glasses be worn throughout this installation process. Be sure motorcycle is on level surface, secure and cool.

Cleaning: Take special care in cleaning the finish. Never use abrasive polishes or cleaners as these can scratch and/or damage the finish. Avoid power washing/applying direct stream to aftermarket parts.

Note: Hand start all bolts, **DO NOT** use impact wrench/"zip gun" when installing.


4. Install the supplied Retaining Ring O-Ring inside the headlight retaining ring.
5. Install the ProBEAM® Adaptive LED Headlight. If motorcycle has OEM H4 connector plug ProBEAM® Adaptive LED Headlight directly to the H4 connector. If motorcycle has MX150 connector use IND-HL-ADPT (sold separately) to the OEM MX150 connector. **Note: The red (position light) wire is intended for International models only. Not used on US models and should be secured the the headlight harness with cable ties to prevent wires from being cut, frayed or pinched.**

Questions? Email: info@CustomDynamics.com or Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:0AM-5:30PM EST

Installation Instructions - Page 2

Installation Continued:

6. Install the OEM retaining ring onto the ProBEAM® Adaptive LED Headlight and use the supplied Retaining Ring Nylon Spacers and Mounting Screws to the headlight bucket. Shown in **Figure 2**.

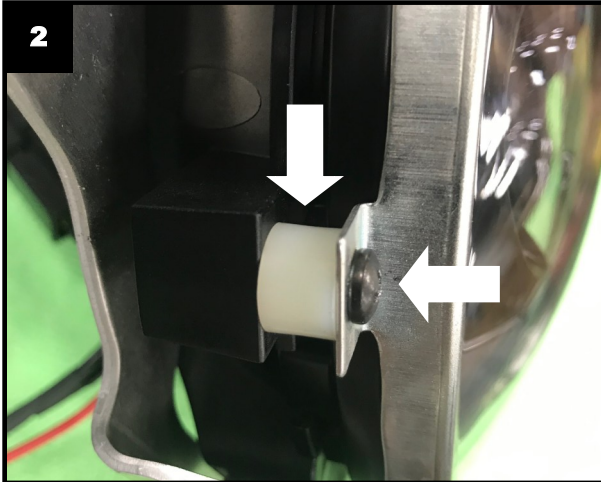

7. Reconnect the negative battery cable to the battery and reinstall all necessary parts.
8. Test the Custom Dynamics® ProBEAM® Adaptive LED Headlight for proper operation.

PROBEAM[®]
BY CUSTOM DYNAMICS[®]