

## Custom Dynamics® ProBEAM® LED Rear Bullet Ringz™ Installation Instructions



We thank you for purchasing Custom Dynamics® ProBEAM® LED Rear Bullet Ringz™. Our LEDs offer maintenance free service and higher visibility. We offer one of the best warranty programs in the industry and we back our products with excellent customer support, if you have questions before or during installation of this product please call Custom Dynamics® at 1(800)382-1388. Patent Pending.

**Part Number:** PB-BR-RR-IND-BR PB-BR-RR-IND-BS  
PB-BR-RR-IND-CR PB-BR-RR-IND-CS

### Package Contents:


- ProBEAM® LED Bullet Ringz™ (2)
- Heat Shrink Tubes (2)
- Instructions (1)



**Fitment:** 2015-2025 Indian® Roadmaster, 2018 Roadmaster Classic, 2020-2021 & 2025 Roadmaster Elite, 2016-2025 Springfield, 2018-2019 Springfield Dark Horse, 2015-2019 Chief, Chief Classic, Chief Dark Horse, 2015-2020 Chief Vintage, 2021 Vintage, 2015-2018 Chieftain, Chieftain Dark Horse and 2018-2020 Chieftain Classic.

### Installation:

1. Remove all necessary parts to disconnect the negative battery cable from the battery.
2. Remove the OEM turn signal clusters from the turn signal housing. Shown in **Figure 1**.

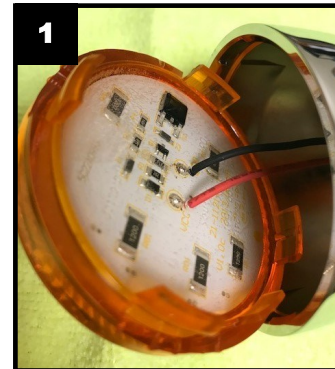

3. Cut the red and black wires one at a time close to the cluster to leave enough wire to connect to. Shown in **Figure 2**.



Please read all Information below before Installation

**Warning:** Disconnect negative battery cable from battery; refer to owner's manual. Failure to do so may result in electrical shock, injury, or fire. Secure negative battery cable away from positive side of battery and all other positive voltage sources on motorcycle.


**Safety First:** Always wear appropriate safety gear including safety glasses when performing any electrical work. It is highly recommended that safety glasses be worn throughout this installation process. Be sure motorcycle is on level surface, secure and cool.

Questions? Email: [info@CustomDynamics.com](mailto:info@CustomDynamics.com) or Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:0AM-5:30PM EST


## Installation Instructions - Page 2

### Installation Continued:


- Slide the supplied Heat Shrink Tubes over the wires on the ProBEAM® LED Bullet Ringz™. Shown in **Figure 3**.

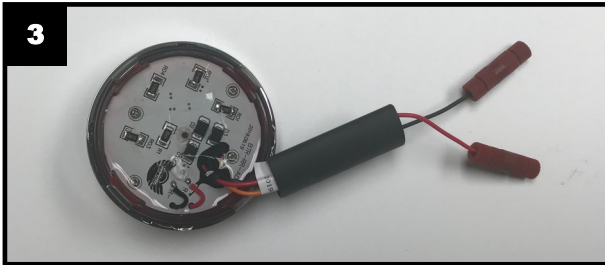

- Strip the wires back from the OEM turn signal housing and connect to the Posi-Lock™ from the ProBEAM® LED Bullet Ringz™. Shown in **Figure 4**.

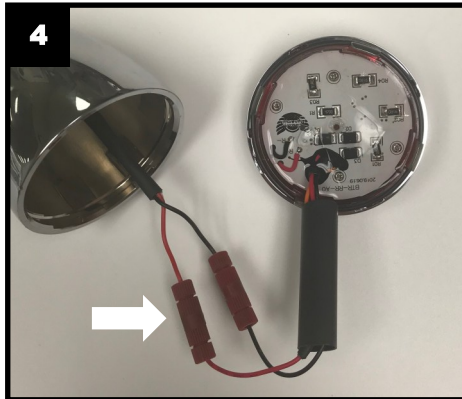

- Slide the Heat Shrink Tube over the Posi-Lock™ connectors, make sure the Heat Shrink tube is centered over the Posi-Lock™ connectors use heat gun to shrink the Heat Shrink Tubes over the Posi-Lock™ connectors. Shown in **Figures 5 & 6**.

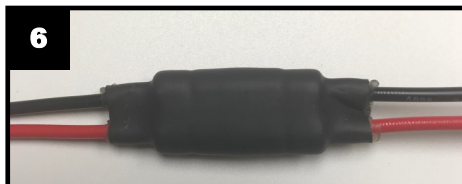

- Twist the ProBEAM® LED Bullet Ringz™ a few rotations to coil the wiring and install the ProBEAM® LED Bullet Ringz™ into the turn signal housings. Make sure the tabs of the ProBEAM® LED Bullet Ringz™ align with the slots of the housing and snap into place all the way, sitting flush with the housing.
- Reconnect the negative battery cable to the battery and reinstall all necessary parts.
- Test the ProBEAM® LED Bullet Ringz™ for proper operation.

### Posi-Lock™ Connectors

**EASY AS** ① ② ③

- Strip wire 1/2"



- Insert



- Hand tighten

