

Custom Dynamics® ProBEAM® Indian® Rear Turn Signals Installation Instructions



We thank you for purchasing Custom Dynamics® ProBEAM® Indian® Rear Turn Signals. Our LEDs offer maintenance free service and higher visibility. We offer one of the best warranty programs in the industry and we back our products with excellent customer support, if you have questions before or during installation of this product please call Custom Dynamics® at 1(800)382-1388. Patent Pending.

Part Number: PB-IND-RTS-A-B PB-IND-RTS-A-C
PB-IND-RTS-R-B PB-IND-RTS-R-C

Package Contents:

- ProBEAM® Indian® Rear Turn Signals (2)
- Mounting Blots (2)
- Instructions (1)


Fitment: Front Turn Signal Replacement on 2015-2020 Indian® Chief, Chief Vintage, Chief Classic, Chief Dark Horse, 2021 Vintage & Vintage Dark Horse, 2015-2025 Springfield & Springfield Dark Horse.

Rear Turn Signal Replacement on 2015-2025 Indian® Roadmaster, 2018 Roadmaster Classic, 2020-2021 & 2025 Roadmaster Elite, 2016-2025 Springfield, 2018-2019 Springfield Dark Horse, 2015-2019 Chief, Chief Classic, Chief Dark Horse, 2015-2020 Chief Vintage, 2021 Vintage, 2015-2018 Chieftain, Chieftain Dark Horse and 2018-2020 Chieftain Classic.



Installation:

1. Remove all necessary parts to disconnect the negative battery cable from the battery.
2. Remove the 3 bolts securing the taillight assembly to the rear fender. Shown in **Figure 1**.

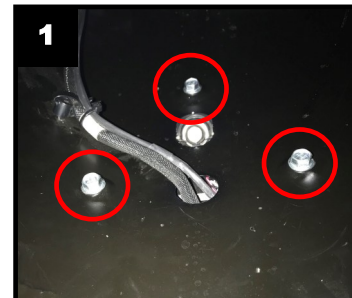

3. Disconnect the 4 taillight assembly electrical connections and lay taillight assembly facedown on a scratch free surface. Shown in **Figure 2**.



Please read all Information below before Installation

Warning: Disconnect negative battery cable from battery; refer to owner's manual. Failure to do so may result in electrical shock, injury, or fire. Secure negative battery cable away from positive side of battery and all other positive voltage sources on motorcycle.

Safety First: Always wear appropriate safety gear including safety glasses when performing any electrical work. It is highly recommended that safety glasses be worn throughout this installation process. Be sure motorcycle is on level surface, secure and cool.

Cleaning: Take special care in cleaning the finish. Never use abrasive polishes or cleaners as these can scratch and/or damage the finish. Avoid power washing/applying direct stream to aftermarket parts.

Note: Hand start all bolts, **DO NOT** use impact wrench/"zip gun" when installing.

Questions? Email: info@CustomDynamics.com or Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:0AM-5:30PM EST

Installation Instructions - Page 2

Installation Continued:

4. Remove the OEM Left and right turn signals by removing the mounting bolts. Shown in **Figure 3**.



5. Install the ProBEAM® Indian® Rear Turn Signals using the supplied Mounting Bolts. **Note: Be sure to use thread locker to prevent the mounting bolts from loosening.**
6. Reconnect the taillight and turn signal electrical connectors, secure all wires with cable ties from being cut, frayed or pinched.
7. Reconnect the negative battery cable to the battery and reinstall all necessary parts.
8. Test the ProBEAM® Indian® Rear Turn Signals for proper operation.