

Custom Dynamics® Shark Demon® Street Glide LED Turn Signals Installation Instructions



Part Number

Patent

SD-SG-FT-AW, SD-SG-FT-YB

US Patent: D1108671, China Patent: ZL202430646776.5

Package Contents

Shark Demon® LED Front Turn Signals (2)
Wind Deflector Mount (2)
Turn Signal Adapter Brackets (2)
FTS HARN (2)
5/16"-18 x 1.0" Socket Head Allen Bolts (2)
5/16"-18 x 0.375" Socket Head Allen Bolts (2)
Cable Ties (10)
Instructions (1)



Fitment

2023-2026 Harley-Davidson® CVO Street Glide (FLHXSE), 2024-2026 Street Glide (FLHX), 2026 CVO Street Glide ST (FLHXSTSE).

Note

Will **NOT** work with H-D™ Black Tie-Down Brackets (H-D™ PN: 93500036).
Will **NOT** work with H-D™ Fairing Lowers (H-D™ PN:57100504).

Suggested Tools

Safety Glasses
Fender Protection
T25 TORX Socket or Handle Driver
T27 TORX Socket or Handle Driver
8mm Allen Socket
1/4" Allen Socket
Pick Tool

Installation


Warning

Rider and passenger safety depend upon the correct installation of this kit. Use the appropriate service manual procedures. If the procedure is not within your capabilities or you do not have the correct tools, have a qualified technician perform the installation. Improper installation of this kit could result in death or serious injury.

1. Remove all necessary parts to disconnect the negative battery cable from the battery.
2. Remove windshield and outer fairing and disconnect the headlight. Shown in **Figure 1**.
3. Remove the wind deflector by using a small pick tool to pull down the plastic lock on both the top and bottom. Pull out and down on the wind deflector to remove and remove the OEM bolt. Shown in **Figures 2 - 5**.
4. Install the new Shark Demon® Street Glide LED Turn Signal in the wind deflector location by sliding the pin into the top pin location and using the supplied Socket Head Allen Bolts. Shown in **Figure 6**.
5. Route the wiring around the back side of the fork and up into the fairing area.
6. Connect the supplied FTS-HARN inline to the OEM front fairing turn signals. Shown in **Figure 7**.

Questions? Email: Info@CustomDynamics.com or Call us at: 1(919)554-0949 M-TH 8:30AM-5:30PM, F 9:30AM-5:30PM EST

Installation Instructions Continued - 2

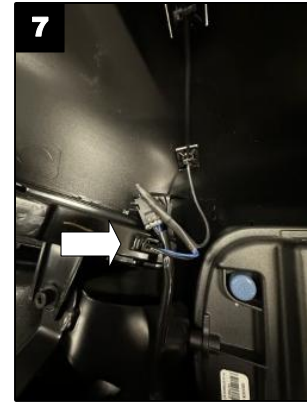

7. Secure all wiring with supplied Cable Ties to keep them from being cut, frayed or pinched.
8. Reinstall the outer fairing and windshield in the reverse order they were removed.
9. Reconnect the negative battery cable from the battery and reinstall all necessary parts.
10. Test the new Custom Dynamics® Shark Demon® Street Glide LED Turn Signals for proper operation.

