



Custom Dynamics® SXS Mirror with LED Run Light & Sequential Turn Signal Installation Instructions

We thank you for purchasing the Custom Dynamics® SXS Mirror with LED Run Light & Sequential Turn Signal! Our products utilize the latest technology and high quality components to ensure you the most reliable service. We offer one of the best warranty programs in the industry and we back our products with excellent customer support, if you have questions before or during installation of this product please call Custom Dynamics® at 1(800) 382-1388.

Part Number: SXS-MIRROR

Package Contents:

- Amber/White LED Mirror Assembly (2)
- 4mm Hex Key (1)
- 5mm Hex Key (1)
- 8" Cable Ties (10)
- Instructions (1)




Fitment: Universal 12VDC negative ground systems, SXS models with 1.6"-2" round tube roll cage.

Note: Unit is plug and play with Custom Dynamics® Auto-Cancel Turn Signal Module (CD-ATC-6, sold separately) and Custom Dynamics® Smart Triple Play® module.

Installation:

1. Disconnect the negative battery cable from the battery.
2. Select desired location on the roll bar that the mirrors will be mounted.
3. Using the 5mm Hex key, mount the mirror to the roll bar. Shown in **Figure 1**.

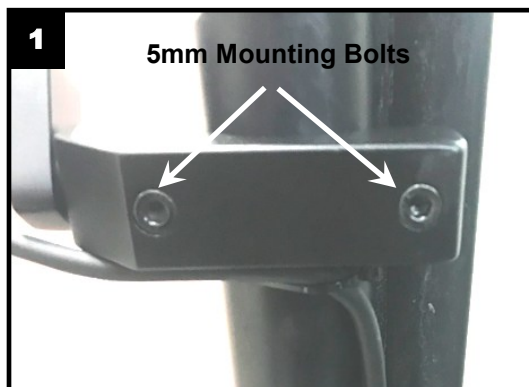

Please read all Information below before Installation

Warning: Disconnect negative battery cable from battery; refer to owner's manual. Failure to do so may result in electrical shock, injury, or fire. Secure negative battery cable away from positive side of battery and all other positive voltage sources on vehicle.

Important: This product is designed and intended for use as auxiliary lighting only. It is NOT intended to replace any original equipment lighting installed on the vehicle and should not be used for that purpose. This product must be wired so that it does not interfere with any original equipment lighting.

Cleaning: Take special care in cleaning the finish. Never use abrasive polishes or cleaners as these can scratch and/or damage the finish. Avoid power washing/applying direct stream to aftermarket parts.

Hard Parts: Hand start all bolts, **DO NOT** use impact wrench/"zip gun" when installing.

4. For plug and play applications using a CD-ATC-6 Turn Signal Module (**sold separately**) Route the mirror wiring harness to the ATC-6 front turn signal connectors. Refer to the CD-ATC-6 instructions for connections.
5. If using as a Universal application, remove the connector on the wiring harness and make your connections.

Wire Color Designations:

Black: Ground

Green: Switched +12Vdc , Running Light

White: +12Vdc Turn Signal Input

6. Using the supplied Cable Ties to secure the wiring to prevent the wires from being cut, frayed or pinched.
7. Reconnect the negative battery cable to the battery.
8. Test the Custom Dynamics® SXS Mirror with LED Run Light & Sequential Turn Signals for proper operation.