




Custom Dynamics® TruBEAM® Passing Lamp Control Harness Installation Instructions

We thank you for purchasing the Custom Dynamics® TruBEAM® Passing Lamp Control Harness. Our products utilize the latest technology and high quality components to ensure you the most reliable service. We offer one of the best warranty programs in the industry and we back our products with excellent customer support, if you have questions before or during installation of this product please call Custom Dynamics® at 1(800) 382-1388.

Part Number: TB-PLHLK-1

Package Contents:

- Passing Lamp Control Harness (1)
- Instructions (1)

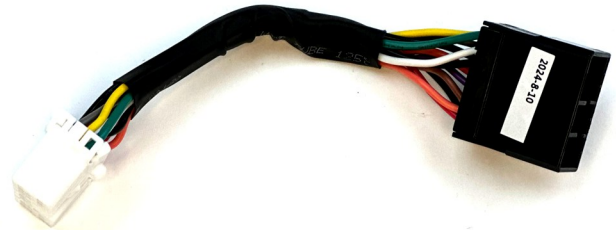

Fitment: 2013 and Earlier Harley-Davidson® Electra Glide, Electra Glide Ultra and TriGlide models (including CVO) with 4.5" OEM passing lamps.

Installation:

1. Remove all necessary parts to disconnect the negative battery cable from the battery.
2. Remove the windshield and outer fairing and set aside in a safe place.
3. Once the fairing is removed, locate the 12 pin harness connectors located on the inside of the of the right side (sitting on motorcycle) inner fairing support bracket. You may need to move wiring around underneath the radio in order to find them. Use the control harness connectors as a reference if needed, they are the same connectors as the factory harness.
4. Disconnect the 12 pin connectors in the harness, then plug the Passing Lamp Control Harness in-line, male to female and female to male. Make sure the connectors click and lock.
5. Install the LED passing lamps per the instructions that came with that specific product.
6. Connect the headlight wiring and reinstall the outer fairing and windshield.
7. Reconnect the negative battery cable to the battery and all necessary parts.
8. Test the passing lamps for proper operation. The Custom Dynamics® TruBEAM® Passing Lamp Control Harness allows the function of the passing lamps to stay ON when the high beam on the main headlight is on. Turn on ignition power, but do not start the engine. Test the function of the passing lamps by turning them on and off with the rocker switch on the dash. Make sure they turn on and off on both low and high beam operation.



ATTENTION

Please read all information below before installation

Note: Read all installation instructions before beginning. Do not attempt installation if you are unsure of any steps within this instruction guide; consult a qualified technician or dealer.

Important: A manufacturer's factory service manual is needed for reference on how to remove the outer fairing.

Safety First: Always follow the basic safety guidelines while working. Park the motorcycle on a flat level surface and make sure ignition is OFF.

Caution: Disconnect the negative battery cable from the battery to avoid electrical shock. If your model is equipped with a main fuse, remove it as outlined in the service manual.

Warning: Ensure proper headlight and passing lamp operation before riding motorcycle. Malfunction of either or both while riding could result in injury or death.

Questions? Email: Info@CustomDynamics.com or Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST