



Custom Dynamics® Pre-1999 Integrated Taillight Harness Installation Instructions

We thank you for purchasing the Custom Dynamics® Pre-1999 Integrated Taillight Harness. Our products utilize the latest technology and highest quality components to ensure you the most reliable service. We offer one of the best warranty programs in the industry and we back our products with excellent customer support, if you have questions before or during installation of this product please call Custom Dynamics® at 1 (800) 382-1388.

Part Number: TL-99-INT-HARN

Package Contents:

- Pre-1999 Integrated Taillight Harness (1)
- 4" Cable Ties (6)
- Instructions (1)

Fits: 1973-1999 Harley-Davidson® Models.

Note: Compatible with Custom Dynamics® Integrated Taillights (sold separately).



ATTENTION



Please read all Information below before Installation

Warning: Disconnect the negative battery cable from battery; refer to owner's manual. Failure to do so may result in electrical shock, injury or fire. Secure negative battery cable away from positive side of battery and all other positive voltage sources on the motorcycle.


Safety First: Always follow the basic safety guidelines while working. Park the motorcycle on a flat level surface and make sure ignition is off.

Important: This product is designed and intended for use as auxiliary lighting only. It is NOT intended to replace any original equipment lighting installed on the motorcycle and should not be used for that purpose. This product must be wired so that it does not interfere with any original equipment lighting.



Installation:

1. Remove seat and disconnect the negative battery cable from the battery.
2. Locate the rear lighting harness on the motorcycle and connect the Custom Dynamics® Pre-1999 Integrated Taillight Harness connecting brown wire to brown wire and violet wire to violet wire.
3. Route the Custom Dynamics® Pre-1999 Integrated Taillight Harness back to the taillight securing the wires with the supplied Cable Ties to prevent them being cut, frayed or pinched.
4. Remove the OEM taillight from the motorcycle.
5. Connect Custom Dynamics® Pre-1999 Integrated Taillight Harness to the Custom Dynamics® Integrated Taillight (**sold separately**), connecting the brown wire to brown and violet wire to violet. Shown in **Figure 1**. **Note: Two connectors will not be used.**

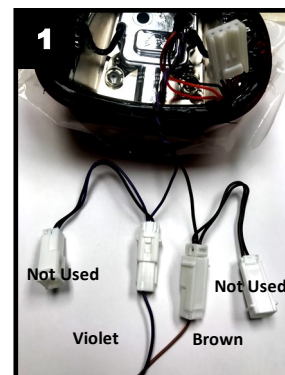

6. Install Custom Dynamics® Integrated Taillight (**sold separately**).
7. Reconnect the negative battery cable to the battery and reinstall seat.
8. Test the rear lighting for proper operation.

Questions? Email: info@CustomDynamics.com or Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST